



# WiFi Setup Guide in Web Page

## GP-H80300IIN, GP-1124D and GP-1124T Wi-Fi Printer

Firstly thank you for choosing our Wi-Fi thermal printer, please follow this manual to use your Wi-Fi printer.

### 1. Turn on the printer, use your PC or laptop to search the Wi-Fi printer and connect it.


Remark: Default mode of Wi-Fi printer is Access Point mode (SSID: Printer AP) ; other devices could connect it and use its Wi-Fi network.

### 2. Open IE browser and input **192.168.0.1**, log in.

Account: admin

Password: admin

Then click STA Mode.

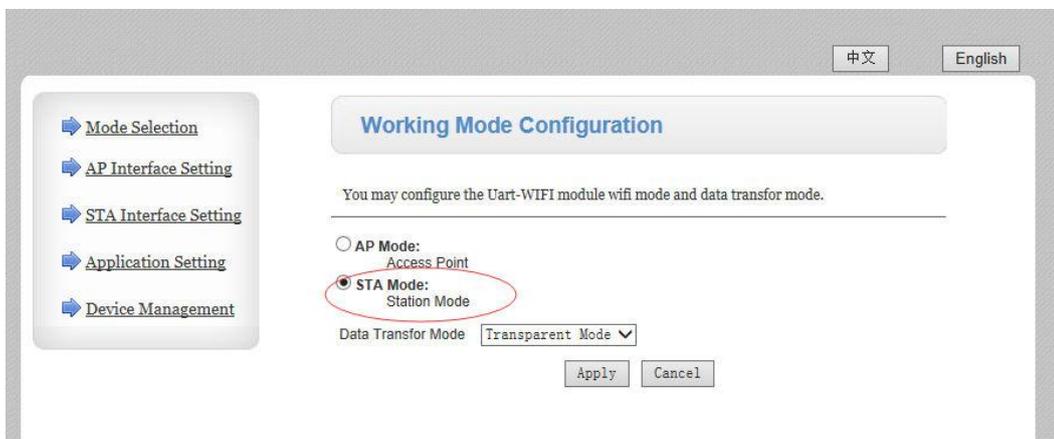

Remark: IP address in STA mode and AP mode could not be in same network segment.

For example, if your router network segment is same **192.168.0**, then you're suggested to change printer AP mode's IP network segment. Click **AP Mode** in above picture showing page and set printer IP address to be **192.168.123.XXX** or **192.168.100.XXX** or others.

### 3. Choose *STA Interface Setting* and set up as per below.

STA Interface Setting

You could configure STA interface parameters here.

Choose the WIFI at your side

STA Interface Parameters	
AP's SSID	GPRINTER Search...
MAC Address (Optional)	
Security Mode	WPA2PSK
Encryption Type	AES
Pass Phrase	ILOVEGPRINTER Put in WIFI pass word

Apply Cancel

WAN Connection Type: DHCP (Auto config)

DHCP Mode	
Hostname(Optional)	HF-A11

Apply Cancel

### 4. Click *Device Management* and click *Restart*, wait for your printer to take effect the new settings.

Device Management

4.02.11.15

You may configure administrator account and password, load default setting or update firmware.

Administrator Settings	
Account	admin
Password	admin

Apply Cancel


Restart Module	
Restart Module	Restart

Load Factory Defaults	
Load Default Button	Load Default

Update Firmware	
Location:	浏览...






Apply





## 5. Print the Self test page, you will find the details of Wi-Fi printer IP address etc.

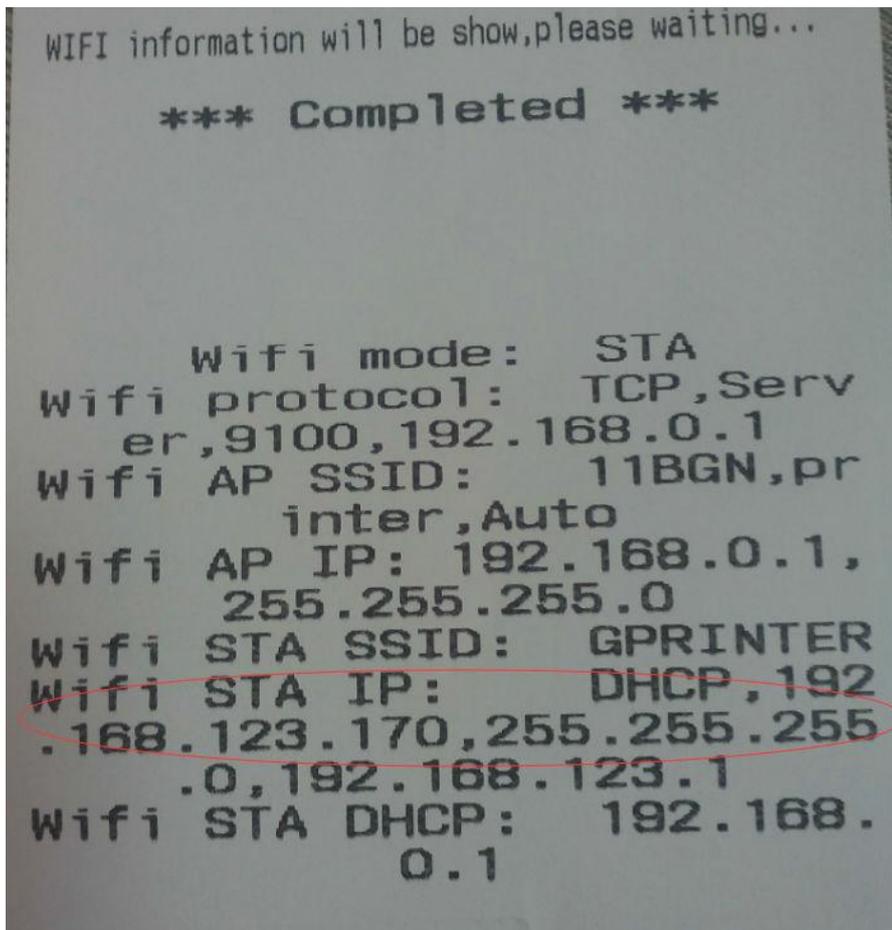

- (1) **Wi-Fi mode: STA**  
If not showing STA, then please repeat the setup procedures and make sure you wait for enough time for printer to restart, and take effect the new settings, until you see STA showing on the page.
- (2) **Wi-Fi STA IP: DHCP, 192.168.123.170**  
You'll find it is different network segment from printer IP in AP mode 192.168.0.1.
- (3) **Be noted** that subnet mask 255.255.255.0 cannot be changed at any time; otherwise the printer will be damaged.

## 6. Install printer driver in your PC/laptop.

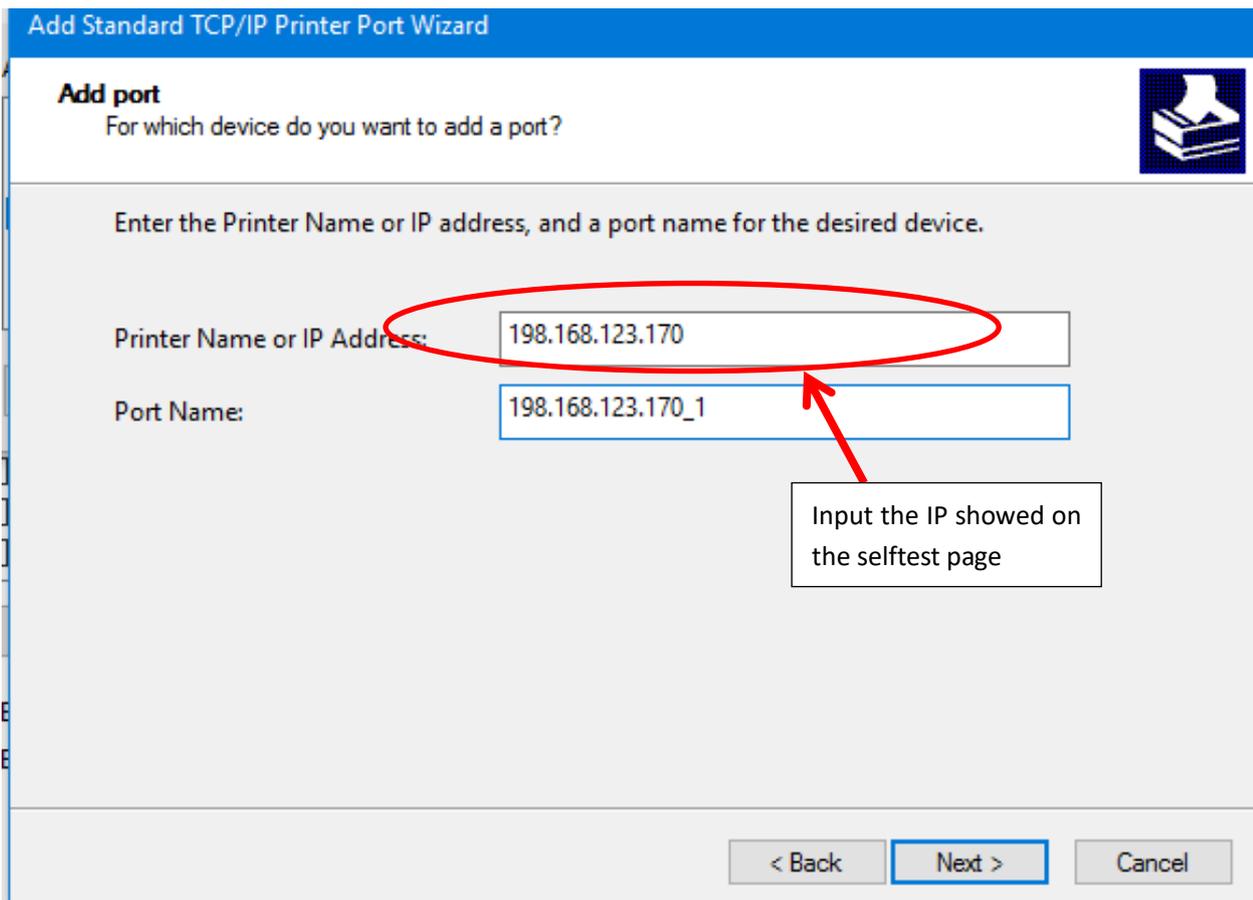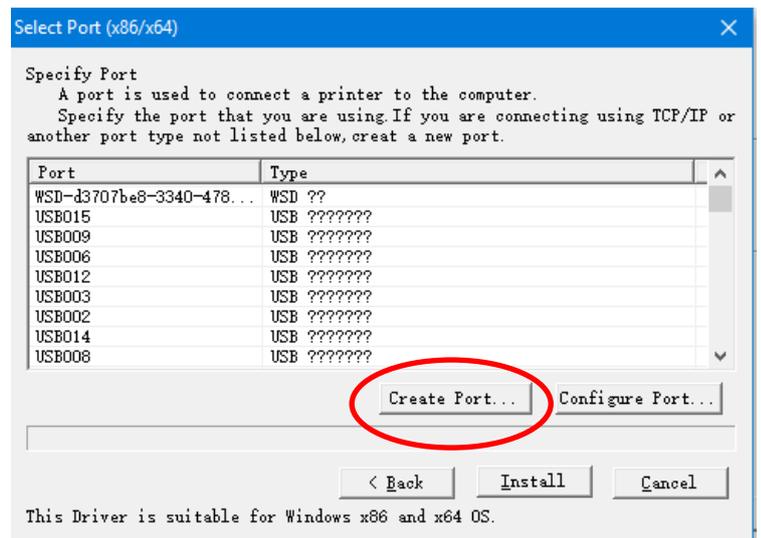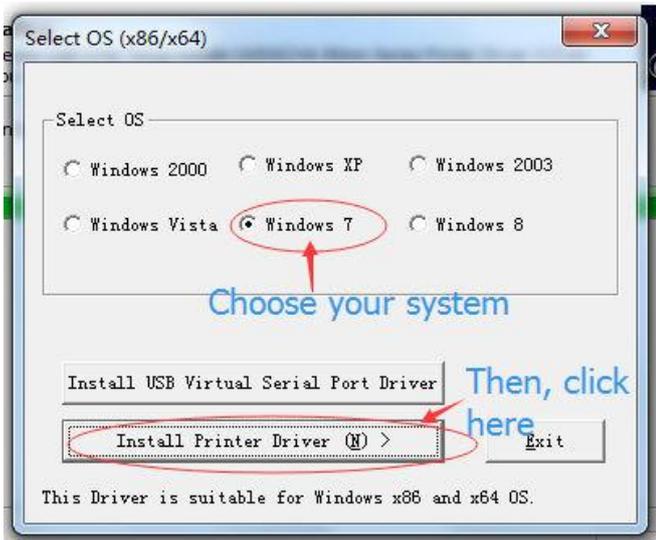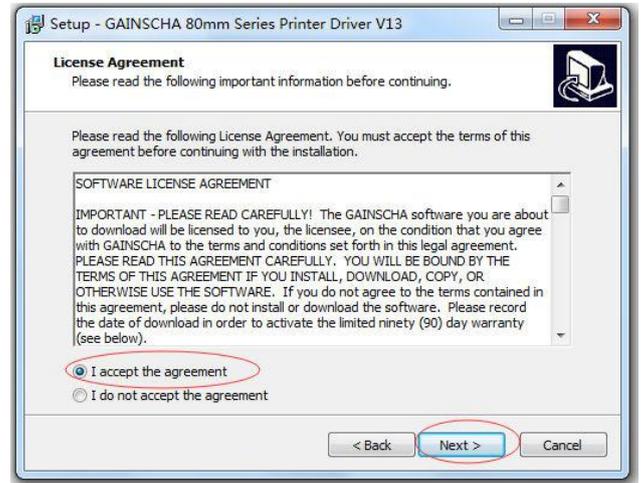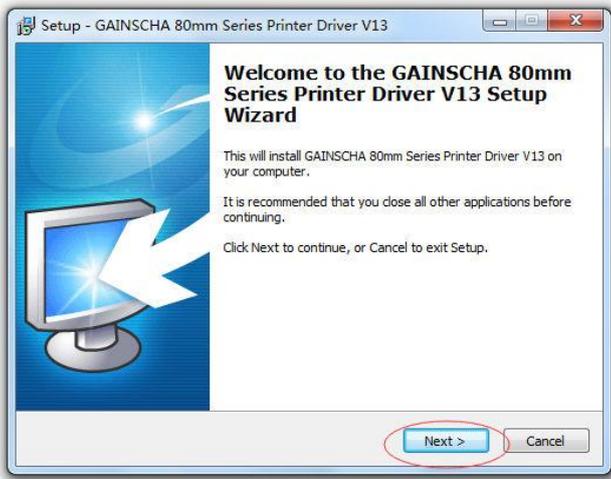

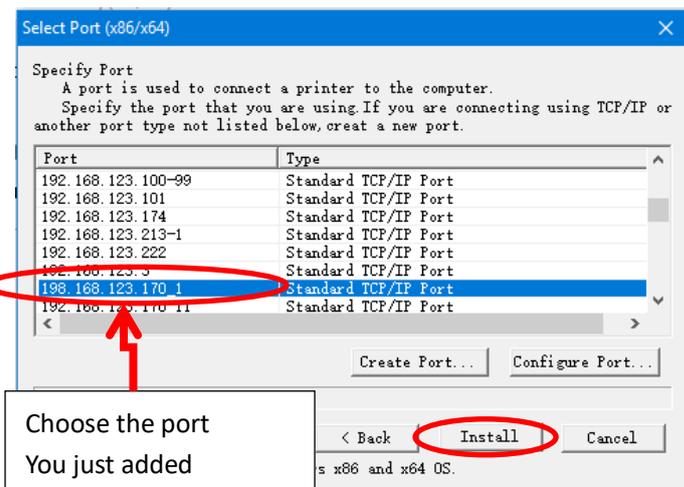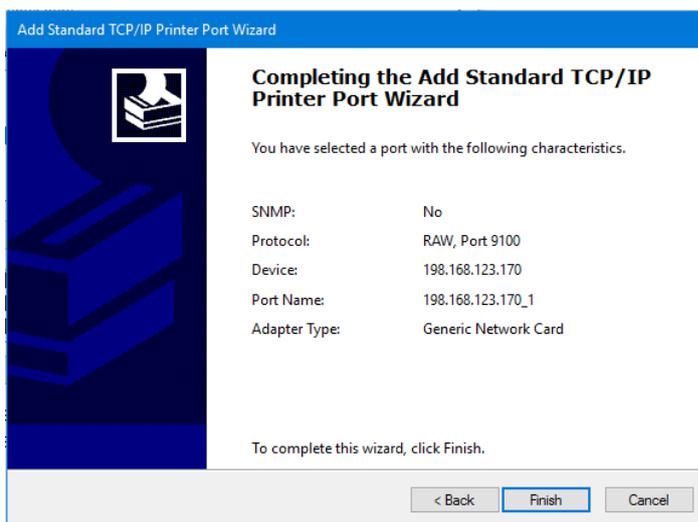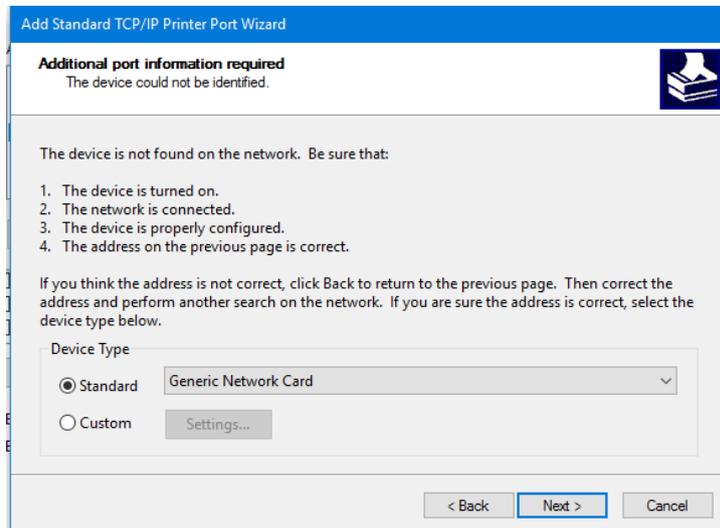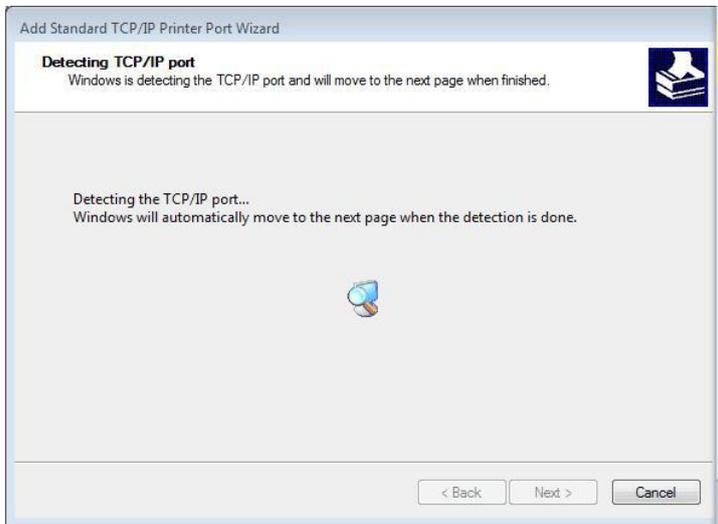

**7. Take a windows test page in driver property; if test page is printed out, congrats, your Wi-Fi printer is connected successfully.**